



STEPS TO CONSTRUCT A SOLID, SQUEAK-FREE FLOOR SYSTEM

If not installed properly, floor systems can squeak, buckle, and cause nail-pop. To cut callbacks due to these problems, follow the simple floor construction steps below. APA recommends a glued floor system.

Step 1: Choose the correct materials.

Use dry materials such as I-joists or dry lumber. Dry lumber is more dimensionally stable than green lumber. As it dries, green dimension lumber tends to cause nail-pop, making bumps under the finish flooring. These bumps can lead to squeaks and to accelerated wear of the finish flooring.

APA structural panels are manufactured in a variety of grades and thicknesses. When selecting your floor panel, consider the applied load, joist spacing, finish flooring and floor system (e.g., single floor or subflooring plus underlayment). See Table 1 for the panel that is best for your job.

Step 2: Panel spacing is recommended, leaving room for expansion due to changes in moisture content.

From their initial mill-dry state, panels will expand as they reach their equilibrium moisture content. If they are installed without room to expand, panels may buckle. APA recommends leaving 1/8" space at all sheathing and Sturd-I-Floor edge and end joints, including tongue-and-groove joints. See Figure 2 for tongue-and-groove spacing.

To further minimize the potential for panel buckling, allow panels to acclimate prior to installation. To do this,

stand panels on edge for several days, allowing air circulation to all sides.

Step 3: If using a glued floor system, select an adhesive conforming to APA Performance Specification AFG-01 or ASTM D3498. To prevent premature dryout of the adhesive, spread enough glue to lay ONLY 1 or 2 panels at a time.

To assure the panels will be firmly and permanently secured to the joists, wipe away water, dust and debris before applying glue.

Apply glue (about 1/4-inch-diameter bead) to framing members in a continuous line, or in a serpentine pattern in wide areas. Glue all tongue-and-groove joints by spreading glue in groove. Avoid squeeze-out by applying a thinner line in groove (about 1/8 inch) than on joists.

Complete all nailing of each panel before the glue sets or skins over. Check glue manufacturer's recommendations for allowable time. Remember, warm weather accelerates glue setting.

Step 4: Nail panels correctly to prevent squeaks.

The correct nail size and spacing for your job depends on your joist spacing and panel thickness, as well as the type of panel product you are using. Attachment schedules and fastener recommendations are provided in Table 1.

For other structural wood panel application recommendations, see APA's *Engineered Wood Construction Guide*, Form E30.

FIGURE 1

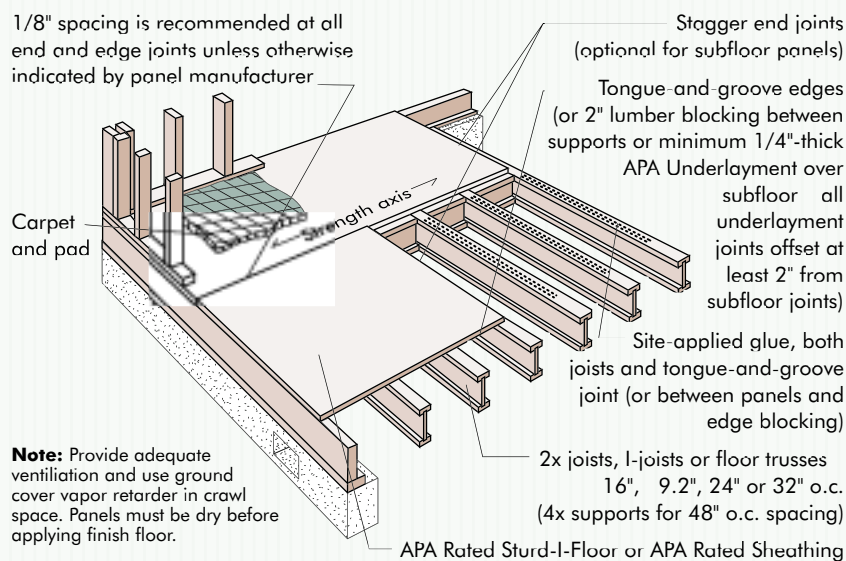


TABLE 1

PANEL AND ATTACHMENT RECOMMENDATIONS FOR APA PANEL FLOORS^(a)

Joist Spacing (in.)	Finish Flooring Type	APA Panel Grade and Span Rating	Nail Size and Type	Glue-Nailed		Nailed-Only	
				Maximum Nail Spacing Supported Panel Edges ^(f)	Maximum Nail Spacing Intermediate Supports	Maximum Nail Spacing Supported Panel Edges ^(f)	Maximum Nail Spacing Intermediate Supports
16	Carpet and Pad	STURD-I-FLOOR 16 oc, 20 oc, 24 oc	6d ring- or screw-shank ^(b)				
	Separate Underlayment or Structural Finish Flooring	RATED SHEATHING 24/16, 32/16, 40/20, 48/24	8d common ^(d)	12	12	6	12
19.2	Carpet and Pad	STURD-I-FLOOR 20 oc, 24 oc	6d ring- or screw-shank ^(b)				
	Separate Underlayment or Structural Finish Flooring	RATED SHEATHING 40/20, 48/24	8d common	12	12	6	12
24	Carpet and Pad	STURD-I-FLOOR 24 oc, 32 oc, 48 oc	6d ring- or screw-shank ^(b,c)				
	Separate Underlayment or Structural Finish Flooring	RATED SHEATHING 48/24	8d common	12	12	6	12
32	Carpet and Pad	STURD-I-FLOOR 32 oc, 48 oc	8d ring- or screw-shank ^(b)	6	12	6	12
48	Carpet and Pad	STURD-I-FLOOR 48 oc	8d ring- or screw-shank ^(e)	6	6	6	6

(a) For panel recommendations under ceramic tile, refer to *APA Engineered Wood Construction Guide*, Form E30.

(b) 8d common nails may be substituted if ring- or screw-shank nails are unavailable.

(c) If a 7/8-inch-thick or thicker panel is used, attach with 8d ring- or screw-shank nails. At supported panel edges use a nail spacing of 6 inches on center.

(d) 6d common nail permitted if panel is 1/2 inch or thinner.

(e) 10d common nails may be substituted with 1-1/8-inch panels if supports are well seasoned.


(f) Fasten panels 3/8 inch from panel edges.

TYPICAL TRADEMARKS



FIGURE 2

RECOMMENDED TONGUE-AND-GROOVE JOINT SPACING

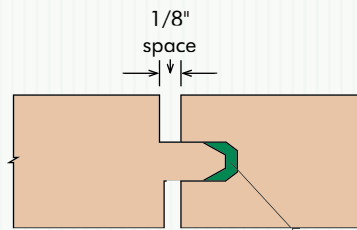

AFG-01 or ASTM D3498 when glued floor system is used

The product use recommendations in this publication are based on APA – The Engineered Wood Association’s continuing programs of laboratory testing, product research, and comprehensive field experience. However, because the Association has no control over quality of workmanship or the conditions under which engineered wood products are used, it cannot accept responsibility for product performance or designs as actually constructed. Because engineered wood product performance requirements vary geographically, consult your local architect, engineer or design professional to assure compliance with code, construction, and performance requirements.

We have field representatives in many major U.S. cities and in Canada who can help answer questions involving APA trademarked products. For additional assistance in specifying engineered wood products, contact us:

APA – THE ENGINEERED WOOD ASSOCIATION HEADQUARTERS

7011 So. 19th St. • P.O. Box 11700
Tacoma, Washington 98411-0700
(253) 565-6600 • Fax: (253) 565-7265



www.apawood.org

PRODUCT SUPPORT HELP DESK

(253) 620-7400

E-mail Address: help@apawood.org

Form No. Q300L/Revised May 2003/0010

